
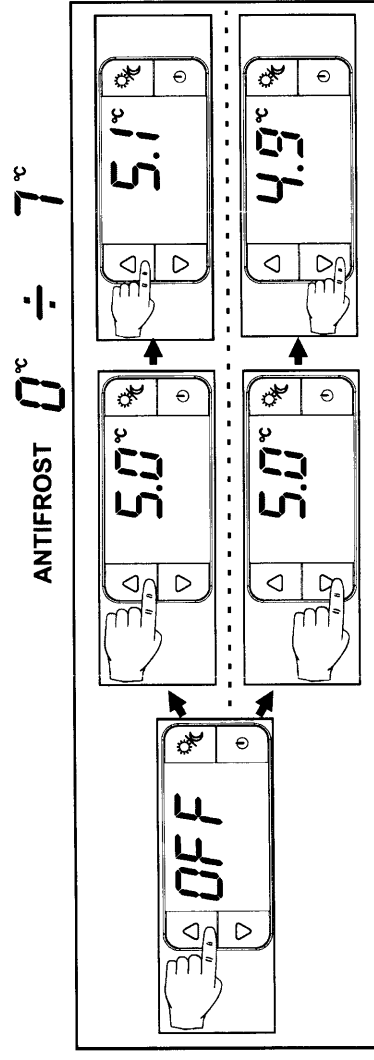
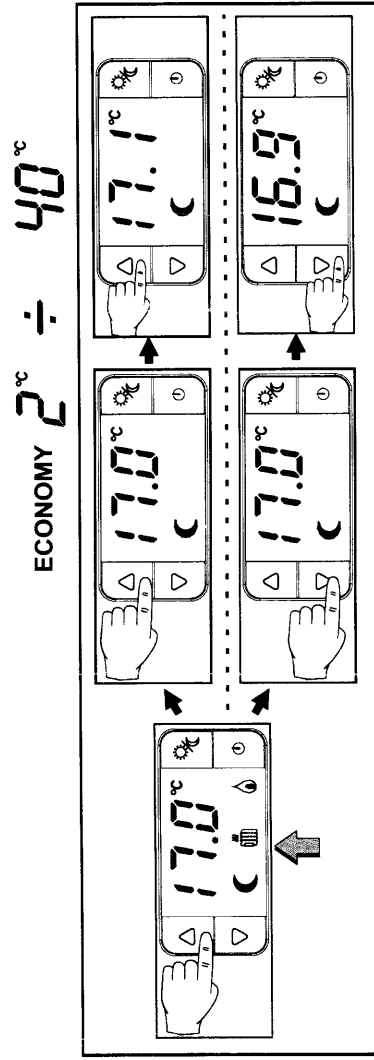


(IT) (UK) (DE) (EL)

Impostazione della temperatura


(ES) Programación de la temperatura (FR) Programmation de la température (RU) Установка температуры (RO) Instalarea temperaturii

Πύθμιση θερμοκρασίας.

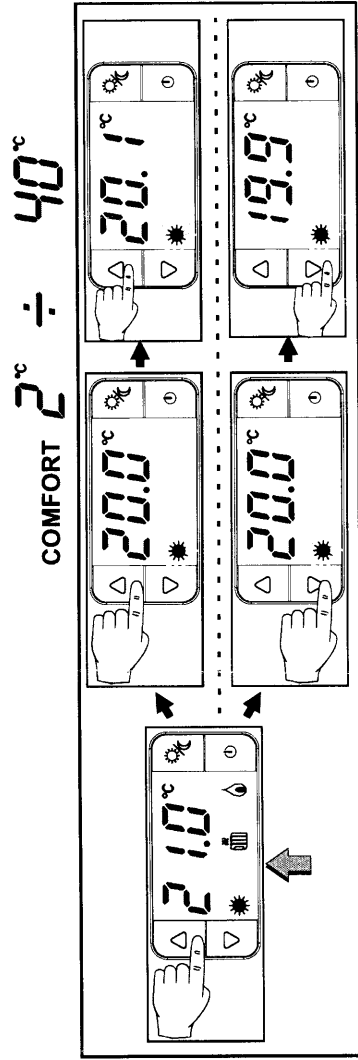


(IT) SOSTITUZIONE PILE
(UK) BATTERY REPLACEMENT
(RU) ЗАМЕНА БАТАРЕЕК
(RO) OCUIREA BATERIILOR

(ES) SUSTITUCIÓN DE PILAS
(FR) REMPLACEMENT DES PILES
(DE) BATTERIE ERSETZEN
(EL) ΑΝΤΑΛΑΓΗ ΜΠΑΤΗΡΙΩΝ

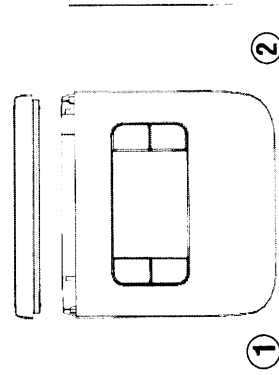

(IT) INSTALLAZIONE (UK) INSTALLATION
(RU) УСТАНОВКА ПРИБОРА

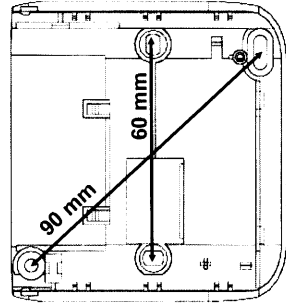

(IT) CH110/111/112 viene fornito con uno zoccolo
(UK) CH110/111/112 is supplied with a base suitap
(ES) CH110/111/112 esta provisto con un zocalo a
(FR) CH110/111/112 est fourni avec un socle adapte a
(DE) CH110/111/112 wird mit einem Sockel für Auf
(RU) CH110/111/112 поставляется полностью с ос
(RO) CH110/111/112 se furnizează în set cu baza, pot
(EL) CH110/111/112 Ο θερμостάτης CH110 παρ

